# LIMITLESS CreditCharge™ Quick Start Guide



## WHAT'S INCLUDED

• (1) 24" Type-C to USB Charging Cable

- (1) CreditCharge™
- (1) 4" Type-C Charging Cable
- (1) Microfiber Pouch



## COMPONENTS

### **Power Bank**

- 1. Built-In Micro Cable
- 2. Built-In Cable Storage
- **3.** Type-C Port (Input/Output)
- **4.** 4x LED Indicator Lights
- **5.** Built-In Lightning Cable



## TECH SPECS

Model: LIM-CCRG-XXX

Battery Capacity: 2,500mAh

**Recharging Time (From 0%):** ±2.5 Hours

Type-C Port (Input/Output): 5V/2.4A

**Built-In Cables:** Lightning & Micro

**Built-In Cable (Output):** 5V/2A (Max)

Total Power: 12W

**Dimensions:** 2.52 in x 3.54 in x 0.21 in

**Weight:** 2.40 oz (0.15 lbs)

Scan to learn more about using the features of your CreditCharge™:



## COMPATIBILITY

#### Micro Cable:

Compatible with select Tracfones. Speakers, Cameras, Power Banks, & More

## Lightning Cable:

Compatible with iPhones, AirPods, & Most Apple Devices

## Type-C Port (Input/Output):

Compatible with newer devices by Samsung, Microsoft, Google, LG, Huawei, select Apple iPads (2018 and newer). select Tracfones. & More

## LIMITLESS

All rights reserved. Limitless CreditCharge™. CreditCharge™, and Limitless™ are trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. Accessories sold separately.

#### LimitlessInnovations.com

Support@LimitlessInnovations.com (855) 843-4828

> Limitless Innovations, Inc. 4800 Metalmaster Way McHenry, IL 60050

© Limitless Innovations, Inc.













Designed in USA. Made in China.

# **GETTING STARTED**

charge. It is recommended to charge the battery to 100% upon arrival and after each use. When not in use, store in the included Microfiber Pouch.

The CreditCharge™ will arrive with a partial

## CHARGING THE POWER BANK

- . Plug the included 24" Type-C to USB Charging Cable into the Type-C Port.
- 2. Plug the opposite end of the Charging Cable into a USB power source (not included). The CreditCharge™ will begin to charge and the 4x LED Indicator Lights will blink while charging, indicating the current battery level.

LED INDICATOR LIGHT	CHARGE REMAINING
	1-25%
	26-50%
	51-75%
	76-100%

## RECHARGING A DEVICE A. First, determine which charging

- connection the device is compatible with: B. Micro, Lightning, or Type-C.
  - **C.** If Micro or Lightning, use one of the built-in cables (pictured below).
    - Locate the appropriate cable by removing it from the Built-In
  - Cable Slot. 2. Plug the Charging Adapter into z
  - 4. The device will begin to charge.

3. the charging port of the device.

5. If the device does not begin to charge, check the connection and the battery



**D.** If Type-C, use the included

4" Type-C Charging Cable.

Plug one end of the Type-C Charging

Cable into the Type-C Input/Output.

Charging cable into the charging port

of the device. The device will begin to

charge, check the connection and the

battery level of the CreditCharge™.

• **TIP:** The Type-C Cable can be folded

backwards to simplify charging &

2. Plug the other end of the Type-C

If the device does not begin to

charge (pictured below).

carrying the device.

## SAFETY INFORMATION By using the Limitless CreditCharge™

("CreditCharge™"), you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the CreditCharge™. By using the CreditCharge™, you hereby agree at all times to comply fully with all safety warnings, operating instructions, and general safety information in this user manual. By using the CreditCharge™, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained

arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the CreditCharge™. WARNING

by you (including, without limitation, losses

- The CreditCharge<sup>™</sup> is **NOT** a toy and should be kept away from children.
- Do NOT use the CreditCharge™ near a magnetic or electric field. Do NOT use the CreditCharge<sup>™</sup> in
- direct sunlight or extreme heat for extended periods of time. Do NOT use the CreditCharge<sup>™</sup> if it has
- been damaged and/or modified. Do NOT subject the CreditCharge<sup>™</sup> to harsh chemicals.
- Do NOT submerge the CreditCharge™ or its accessories in water
- Do **NOT** insert any foreign objects into the openings or port of the
- CreditCharge™. Do NOT charge the CreditCharge™ in high humidity conditions.

guidelines.

with the CreditCharge™.

• Do **NOT** attempt to replace the

• Do **NOT** attempt to disassemble,

its accessories in any way.

the CreditCharge™ as

battery as it is a non-serviceable part.

repair, or open the CreditCharge™ or

• Do **NOT** paint or apply coatings to

you might affect moving parts or

supplies or non-approved adapters

disposed of, as per state and local

damage internal components.

• Do **NOT** use third party power

• Batteries should be recycled or

### **AIR TRAVEL**

 You may carry the CreditCharge™ on an airplane. Do **NOT** travel with the CreditCharge™ in your checked

baggage.

For more information, visit: https://www.faa.gov/travelers