


DigiClock™

Quick Start Guide



WHAT'S INCLUDED

- (1) DigiClock
- (1) 180° 60" Type-C to USB Cable
- (1) USB Wall Adapter
- (1) CR2016 Coin Battery (Installed)
- (1) User Manual

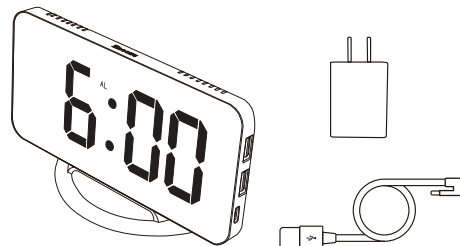

TECH SPECS

Model: LIM-DCLK-XXX

2x USB Output: 5V/2A (Max)

Type-C Input: 5V/2A

Size: 6.22" x 3.07" x 0.51"

Weight: 0.23 lb

SAFETY INFORMATION

By using the DigiClock, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the DigiClock. By using the DigiClock, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the DigiClock, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the DigiClock.

WARNINGS

- The DigiClock is **NOT** a toy and should be kept away from children.
- Do **NOT** use the DigiClock near a magnetic or electric field.
- Do **NOT** use the DigiClock in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the DigiClock if it has been damaged and/or modified.
- Do **NOT** subject the DigiClock to harsh chemicals.
- Do **NOT** submerge the DigiClock or its accessories in water.
- Do **NOT** store the DigiClock where temperatures will exceed 140° F (60° C).
- Do **NOT** insert any foreign objects into the openings or port of the DigiClock.
- Do **NOT** charge the DigiClock in high humidity conditions.

- Do **NOT** attempt to disassemble, repair, or open the DigiClock or its accessories in any way.
- Do **NOT** paint or apply coatings to the DigiClock as you might affect moving parts or damage internal components.
- Batteries should be recycled or disposed of, as per state and local guidelines.

LIMITLESS™

All rights reserved. Limitless DigiClock™, DigiClock™, and Limitless™ are trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. Accessories sold separately.

LimitlessInnovations.com
Support@LimitlessInnovations.com
(855) 843-4828

Limitless Innovations, Inc.
4800 Metalmaster Way
McHenry, IL 60050

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov




Limitless Innovations

To view the complete user manual, please visit:
LimitlessInnovations.com/DigiClock

COMPONENTS

1. Mirrored Digital Display
2. "AL" Alarm Indicator
3. 12-Hour PM Indicator
4. Light Sensor
5. Mode Button (M)
6. Plus Button (+)
7. Minus Button (-)
8. Snooze Button
9. Keyhole
10. Backup Battery Slot
11. Removable Base
12. USB Output 1
13. USB Output 2
14. Type-C Input

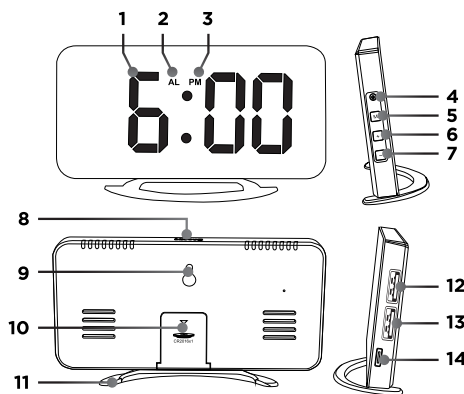

CONTROL PANEL



Single Click:

Check Alarm Time

Double Click:

Night Mode

Press & Hold (2 Seconds):

Enter Time Setting Mode



Single Click:

Adjust the Brightness

Press & Hold:

Turn On/Off Light Sensitivity Mode



Single Click:

Turn On/Off the Alarm

In Time Setting Mode:

Single Click:

Decrease the Value By 1

Press & Hold:

Decrease the Value 8 / Second

HOW TO USE

Setting the Clock:

1. Press and hold the Mode Button for 2 seconds to enter the time setting mode.
2. Use the Plus (+) and Minus (-) Buttons to adjust the values and the Mode (M) Button to switch to the next sequence.

Time Setting Sequence:



Setting & Using the Alarm:

1. Press the Minus (-) Button to turn the Alarm on/off. You should see the "AL" Alarm Indicator on the Digital Display when the Alarm is activated.
2. With the alarm turned on, click the Mode (M) Button to view the current alarm time setting.
3. Press and hold the Mode (M) Button for 2 seconds to enter the alarm time setting mode.

4. Use the Plus (+) and Minus (-) Buttons to adjust the values and the Mode (M) Button to switch to the next sequence.

Alarm Time Setting Sequence:



Turning Off the Alarm

The alarm will ring for 2 minutes before the automatic shut-off triggers.

1. Snooze the Alarm
 - a. Press the Snooze Button to enter the Snooze mode. The "AL" Alarm Indicator will blink.
 - b. Press the Mode (M), Plus (+), or Minus (-) Button to turn off Snooze mode.
2. Press the Mode (M), Plus (+), or Minus (-) Button to turn off the alarm.

Adjusting the Brightness:

Click the Plus (+) Button to adjust the brightness.

Brightness Levels:



Light Sensitivity Function:

There is a built-in light sensor that can automatically adjust the brightness of the Digital Display based on the environment. Press and hold the Plus (+) Button to turn this feature on/off.

Night Mode:

This feature will automatically adjust the brightness of the Digital Display to the Dark brightness level at the programmed time.

1. Double click the Mode Button to enter the Night Mode selection.
2. Press the Plus (+) or Minus (-) Button to turn the Night Mode on/off.

3. With Night Mode turned on, press and hold the Mode (M) Button to enter the Night Mode time setting.

4. Use the Plus (+) and Minus (-) Buttons to adjust the values and the Mode (M) Button to switch to the next sequence.

Night Mode Time Setting Sequence:



NOTE: The Light Sensitivity Function and Night Mode cannot be used at the same time.

Charging a Mobile Device:

Plug a USB cable into one of the USB-A Outputs & into a device. The device will begin to charge.

Backup Battery:

The CR2016 Coin Battery is pre-installed in the Backup Battery Slot to enable the alarm-save in case of a power outage.