PowerTrio- User Manual

Safety Information

By using the PowerTrio, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the PowerTrio. By using the PowerTrio, you hereby agree a t all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the PowerTrio, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the PowerTrio.

Warnings

- The PowerTrio is **NOT** a toy and should be kept away from children.
- Do **NOT** use the PowerTrio near a magnetic or electric field.
- Do NOT use the PowerTrio in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the PowerTrio if it has been damaged and/or modified.
- Do NOT subject the PowerTrio to harsh chemicals.
- Do **NOT** submerge the PowerTrio or its accessories in water.
- Do NOT store the PowerTrio where temperatures will exceed 140° F (60° C).
- Do NOT insert any foreign objects into the openings or port of the PowerTrio.
- Do NOT attempt to disassemble, repair, or open the PowerTrio or its accessories in any way.
- Do NOT paint or apply coatings to the PowerTrio as you might affect moving parts or damage internal components.
- Batteries should be recycled or disposed of, as per state and local guidelines.

What's Included

- (1) PowerTrio
- (1) 36" Type-C to USB Cable
- (1) USB Wall Adapter
- (1) CR2032 Coin Battery
- (1) User Manual

Technical Specifications

• Model: LIM-PTRIO-XXX

• Backup Battery: CR2032 Coin Battery

• Night Light Source: LED

• Time System: 24 Hour / 12 Hour

Clock Brightness: Max, High, Mid, Low
Type-C Input: 5V/3A | 9V/3A | 12V/2A
Wireless Output: 5W, 7.5W, 10W, 15W

• USB Output: 5V/2A

• **Size:** 5.51" x 4.61" x 2.87"

• Weight: 0.485 lb

Components

- 1. Light Button
- 2. Alarm Button
- 3. Wireless Indicator Light
- 4. Wireless Charger
- 5. Plus (+) Button
- 6. Minus (-) Button
- 7. Backup Battery Slot
- 8. AM/PM Indicator
- 9. Alarm Indicators
- 10. Digital Display
- 11. Type-C Input
- 12. USB-A Output

How to Use

Setting Up the PowerTrio

Plug the Type-C to USB Cable into the USB Wall Adapter and into the Type-C Input. The Digital Display will cycle.

Setting the Clock:

1. While the colon ":" is blinking, slowly press the Alarm Button twice to switch between the 12-hour and a 24-hour time system. The Digital Clock Display will read "12hr" and AM/PM will display while 12-hour time system is set.

a. NOTE:

- i. If you are in the time setting mode with the minutes or the hours flashing, press the clock button again until you get back to the main screen with just the colon ":" blinking.
- ii. The "double click" is very touchy when switching between the 12-Hour and 24-Hour settings. There should be a short pause in between clicks. Once the screen reads "12H" you have reached the 12-Hour time setting.
- 2. Press the Alarm Button once to enter the minute setting. Adjust the value using the Plus (+) and Minus (-) Buttons.
- 3. Press the Alarm Button once to enter the hour setting. Adjust the value using the Plus (+) and Minus (-) Buttons.
- 4. Press the Alarm Button to finish setting the time. The colon will flash.

Setting & Using the Alarm:

- 1. Press and hold the Plus (+) Button for 3 seconds to activate or deactivate Alarm 1. Press and hold the Minus (-) Button for 3 seconds to activate or deactivate Alarm 2. The Alarm Indicator icons will illuminate on the left when activated.
- 2. While activated, press and hold the Alarm Button for 3 seconds to enter the alarm time setting mode. Follow the "Setting the Clock" steps 2-4 to set the alarm time for both Alarm 1 and 2.

Checking the Alarm Setting:

- 1. To check the time that the alarms are currently set for, activate the alarms.
 - a. Press and hold the Plus (+) Button for 3 seconds to activate or deactivate Alarm 1. Press and hold the Minus (-) Button for 3 seconds to activate or deactivate Alarm 2. The Alarm Indicator icons will illuminate on the left when activated.
- 2. Press and hold the Alarm Button for 3 seconds to enter the alarm time setting mode. This will show you what time the alarm clock is set to starting with Alarm 1.
- 3. Press the clock button to toggle through each segment in the order outlined below, this will display the alarm time that is currently set for each alarm.
 - a. Alarm 1 Minutes
 - b. Alarm 1 Hours
 - c. Alarm 2 Minutes
 - d. Alarm 2 Hours

Turning Off the Alarm

The alarm will ring for 3 minutes before the automatic shut-off triggers.

- 1. Press any button to enter Snooze Mode. The Alarm Indicator will flash while in Snooze Mode and it will ring again in 5 minutes. The alarm can be snoozed twice.
- 2. Press and hold the Plus (+) or Minus (-) Button to turn off Snooze Mode and deactivate the alarm.

Adjusting the Brightness:

The default is set to the maximum brightness level. To adjust the brightness, press the Minus (-) Button to decrease the brightness and press the Plus (+) Button to Increase the brightness.

Brightness Modes: Max | High | Mid | Low

Charging a Mobile Device:

- 1. Place a compatible device on top of the Wireless Charger. If there is a successful connection the Wireless Indicator Light will illuminate.
- 2. Plug a USB cable into the USB-A Output & into a device. The device will begin to charge.

Wireless Indicator Light:

- Successful Blue Light Flashes Once
- Standby Light Off
- Charging Blue Light On
- Charged Light Off
- Error Blue Light Flashes Continuously

Using the LED Light:

- 1. Press the Light Button once to turn the LED Light on. The White Light Mode will turn on.
- 2. Single click the Light Button to cycle through the 9 light modes:
 - 1. White
 - 2. Alternating Colors
 - 3. Red
 - 4. Orange
 - 5. Yellow
 - 6. Green
 - 7. Blue

- 8. Dark Blue
- 9. Pink
- 3. Press and hold the Light Button to turn off the LED Light without cycling through the 9 light modes.

Backup Battery:

The CR2032 Coin Battery is pre-installed in the Backup Battery Slot to enable the alarmsave in case of a power outage.