

TikiTunes Pro™

Quick Start Guide



CONTROL PANEL

 **Flame**
Light On/Off/Cycle Modes

 **Power**
Turn the Speaker On/Off

 **Bluetooth®**
Activate PartySync™ Mode

 **Plus**
Next Song/Volume Up

 **Minus**
Last Song/Volume Down

 **Play/Pause**
Play/Pause the Song

 **Battery**
Check the Battery Level

QUICK START

Speaker
1. Power on the TikiTunes Pro.
2. Connect to a Bluetooth® enabled device.
3. Begin listening!


Light
Modes: Flicker | Pulsing | Solid

- Single click the **Flame** (🔥) button to turn on & cycle through the modes.
- Press and hold the **Flame** (🔥) button to turn off the light without cycling through the modes.



CONNECT TO A DEVICE

1. Single click the **Power** (⏻) button.
2. Turn on the Bluetooth feature in your device's settings.
3. Select "TikiTunes Pro" from the list of devices. Once you hear the voice prompt "TikiTunes Connected" you are ready to begin streaming. This will be the "Parent" speaker.



Do you have more than one TikiTunes Pro?
Continue with steps 4-7!

SYNC UP TO 100 SPEAKERS

WITH **PARTY SYNC**
TECHNOLOGY 


4. Turn on PartySync Mode on the Parent speaker by single clicking the **Bluetooth** (📶) button. You will hear "PartySync Mode".
5. Power on the second speaker and single click the **Bluetooth** (📶) button to turn on PartySync Mode. This speaker and all additional will be called the "Child".

6. To connect the Child and Parent speakers, press and hold the **Bluetooth** (📶) button until you hear a beep. The prompt "Synced" will play when successfully connected.
7. Repeat steps 5 & 6 for each additional TikiTunes Pro you would like to connect.

• **Pro Tip: Disconnecting Speakers**
Single click the **Bluetooth** (📶) button on any Child speaker to disconnect from the Parent.

Single click the **Bluetooth** (📶) button on the Parent speaker to disconnect all Child speakers.

• **Pro Tip: Indicating the Parent Speaker**
When multiple speakers are connected the LED lights of the control panel will slowly blink to indicate which speaker is the Parent.

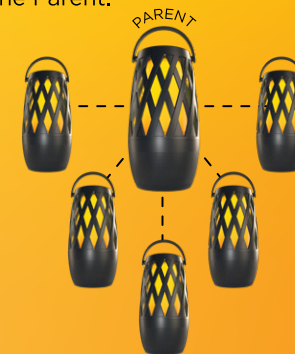

LISTENING

Audio can be adjusted from the Control Panel or directly on your device.

- **Plus (+)**
Single click = next song
Press and hold = volume up
- **Minus (-)**
Single click = restart song
Press and hold = volume down

BATTERY

Single click the **Battery** (🔋) button to check the battery level. A voice prompt will announce the current percentage.

It is recommended to charge the speaker to 100% before each use to achieve the longest playtime.

To charge, connect the included Type-C to USB Cable to a USB output.

The lights on the Control Panel will illuminate red while charging. Once fully charged, the lights will change to blue or turn off.

Recharge Time: 5-6 Hours



TROUBLESHOOTING

Connecting To Bluetooth

If TikiTunes Pro does not show up in your Bluetooth menu, try:

- Turning the device's Bluetooth off, wait 15 seconds, then turn it back on.
- Turning the TikiTunes off, wait 15 seconds, then turn it back on.
- "Forget" TikiTunes Pro from all other near-by mobile devices.

Sound Quality

If the audio being streamed to TikiTunes Pro is skipping or has poor sound quality, try:

- Moving the Main TikiTunes closer to the connected device.
- Moving all paired TikiTunes Pro Speakers closer to the Main Speaker.
- Checking for interferences between the device and the Main Speaker (walls, metal structures, etc).

TECH SPECS

Pairing Name: TikiTunes Pro

Version: 5.3

Pairing Capacity: Up to 100 Speakers

Water Resistant: IPX6

Battery Type: Li-Ion 3.7 V DC 4,000mAh

Recharging Time: 5-6 Hours (from 0%)

Type-C Input: 5V/1A

Playtime: Up to 12 Hours

*Varies by audio volume and light brightness.

Max Output Power: 10W

Transmission Distance: 50 ft

RF Frequency: 2.402G Hz - 2.48 GHz

Drive Unit: \varnothing 57 mm

Impedance: 4 ohm

Sensitivity: -85 dBm

S.P.L.: 95 dB

Accessory Thread Size: 1/4-20 | Class 3A

Dimensions: 7.402" x 3.979"

Weight: 2 lbs

SAFETY INFORMATION

By using the TikiTunes, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the TikiTunes. By using the TikiTunes, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the TikiTunes, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the TikiTunes.

WARNINGS

- The TikiTunes is **NOT** a toy and should be kept away from children.
- Do **NOT** use the TikiTunes near a magnetic or electric field.
- Do **NOT** use the TikiTunes in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the TikiTunes if it has been damaged and/or modified.
- Do **NOT** subject the TikiTunes to harsh chemicals.
- Do **NOT** submerge the TikiTunes or its accessories in water.
- Do **NOT** store the TikiTunes where temperatures will exceed 140° F (60° C).
- Do **NOT** insert any foreign objects into the openings or port of the TikiTunes.
- Do **NOT** charge the TikiTunes in high humidity conditions.

To view the complete user manual, please visit:
LimitlessInnovations.com/TikiTunesPro

LIMITLESS™

All rights reserved. TikiTunes™, TikiTunes Pro™, and Limitless™ are trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. Accessories sold separately.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Limitless Innovations, Inc. is under license. All other trademarks included herein are property of their respective owners.

LimitlessInnovations.com

Support@LimitlessInnovations.com
(855) 843-4828

Limitless Innovations, Inc.
4800 Metalmaster Way
McHenry, IL 60050

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations